



# DENSO™ PROFILING MASTIC

## INSTRUCTIONS FOR USE

COVERING ORIGINAL AND HT VERSIONS

### USE

For profiling around irregular shaped pipe fittings particularly where deep fillings are required. It is used with primer prior to overwrapping with DENSO™, DENSOPOL™ or DENSOCLAD TAPES™ for the long term corrosion protection of buried pipe fittings.

### SURFACE PREPARATION

Surfaces must be clean, dry and dust-free. Remove all loose rust, scale and flaking coatings by scraping, wire brushing or blast cleaning.

### PRIMING

Apply appropriate primer for tape (e.g. DENSO PASTE™ or DENSO™ HI-TACK PRIMER for DENSO TAPE™ or DENSO PRIMER D™ for DENSOPOL™ or DENSOCLAD™ cold applied laminate tapes). Apply DENSO PASTE™ by gloved hand, DENSO™ HI-TACK PRIMER or DENSO PRIMER D™ by brush in a thin layer over the entire surface including threads, crevices and pitted areas.


### APPLICATION

Press DENSO™ PROFILING MASTIC into cavities, angles and around bolt heads to form a profile suitable for wrapping with tape without forming bridges or voids.

### OVERWRAPPING

DENSO™ PROFILING MASTIC must be wrapped with an anti-corrosion tape to complete protection. See 'Instructions for Use' or the particular tape.

**Diagram of the correct application procedure.**

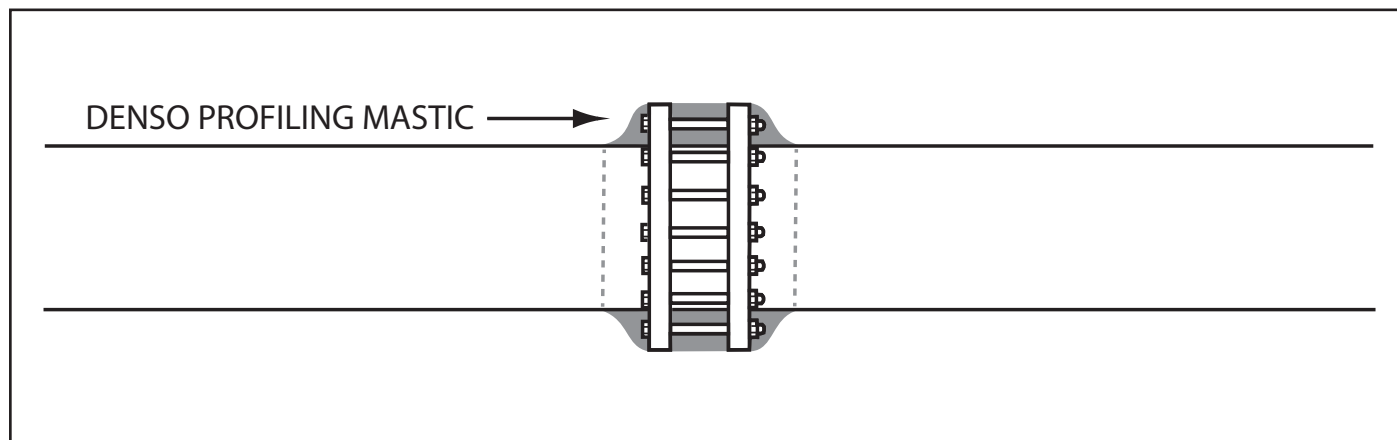



# DENSO™ PROFILING MASTIC

## INSTRUCTIONS FOR USE

COVERING ORIGINAL AND HT VERSIONS

### STORAGE

Store correct way up in original packaging.  
Store in a cool dry place away from heat and open flames.

### TRANSPORT

No special precautions necessary.

### HANDLING

- Grease resistant gloves are advised to reduce skin contact.
- Avoid contact with arms and face etc.
- Wash thoroughly with soap and water after use and before work breaks to remove compound from the skin.
- Careful attention should be given to personal hygiene.
- Change and clean soiled clothing.

### ACTION IN CASE OF...

**FIRE:** Extinguish with dry powder, carbon dioxide or chemical foam. Use air breathing equipment in case of large fires in confined spaces.

**SKIN CONTACT:** Wash with warm water and mild soap.

**EYE CONTACT:** Irrigate eyes thoroughly with clean water.

**SWALLOWING:** Obtain medical advice if necessary.

### DISPOSAL

Please minimise or avoid waste wherever possible. Please do not discard waste material, including packaging, in the surrounding environment. Follow all relevant legislation for disposal.

DENSO NORTH AMERICA INC.  
90 IRONSIDE CRESCENT, UNIT 12  
TORONTO, ONTARIO, M1X 1M3 CANADA  
TEL: 416-291-3435  
EMAIL: [sales@densona-ca.com](mailto:sales@densona-ca.com)



Publication Number  
324.09.2021

A MEMBER OF WINN & COALES INTERNATIONAL

DENSO NORTH AMERICA INC.  
9710 TELGE ROAD  
HOUSTON, TEXAS 77095  
TEL: 281-821-3355  
EMAIL: [info@densona.com](mailto:info@densona.com)

**IMPORTANT:** The information given on this sheet is intended as a general guide only and should not be used for specification purposes. We believe the information to be accurate and reliable but do not guarantee it. We assume no responsibility for the use of this information. Users must, by their own tests, determine the suitability of the products and information supplied by us for their own particular purposes. No patent liability can be assumed.